


**Robic SC-700 Handheld Sports Chronometer
9-Event Multi Memory Chronograph
Operating Instructions and Warranty**

Thank you for buying the Robic SC-700 Handheld Sports Chronometer. Please take a moment to review this instruction guide to become familiar with Robic's operation and to enjoy its many fine features, including:

- **NORMAL TIME (Time - 1)**
 - Time of day in hours, minutes, seconds
 - Calendar with day of the week, month, date
 - Daily alarm and hourly chime
- **MULTI-MODE MEMORY CHRONOGRAPH**
 - Simultaneously displays the lap times, split times and cumulative times to 24 hours
 - Memory recall of 9 events, displaying combination of lap time, split time, cumulative time & event number
 - Automatic lap counter
- **ELECTRONIC PACER**
 - When activated, emits electronic "beep" sound at a constant, pre-determined rate
 - User selectable pacer rate from 30 to 160 beats per minute
- **DUAL TIME ZONE (Time - 2)**
 - Displays time in hours & minutes for another time zone

Location and functionality of pushbuttons for operating your Robic Sports Chronometer

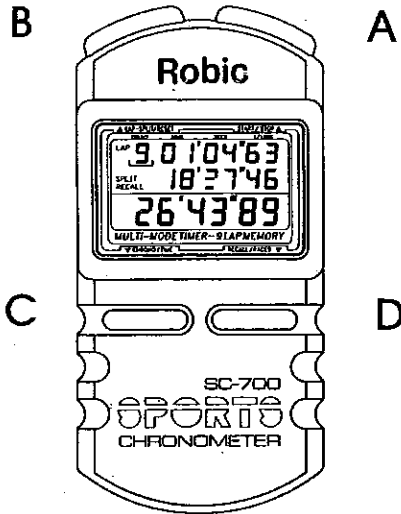

- | | |
|--------------|--|
| Pushbutton A | Chrono: START / STOP
Pacer: START / STOP / ADVANCE
Time Set: ADVANCE
Alarm / Chime: ON / OFF
Pacer Set : ADVANCE |
| Pushbutton B | Chrono: LAP / SPLIT / RESET
Pacer: SET
Time Set: SET / SELECT |
| Pushbutton C | Chrono: MODE SELECT
Pacer Set: EXIT SET
Time Set: EXIT SET |
| Pushbutton D | Chrono: MEMORY RECALL
Time: MODE SELECT
Pacer: MODE SELECT |

AUDIBLE CONFIRMATION BEEP: A confirmation beep will sound anytime a functional pushbutton is pressed (excluding activated PACER function).

OPERATING YOUR ROBIC SC-700 SPORTS CHRONOMETER

NOTE: The starting point for any operation of your Robic is NORMAL TIME.

NORMAL TIME OPERATION

Press either **C** or **D** to locate NORMAL TIME mode. Display will show:

Top Row: Day of the week, month, date
Middle Row: Alarm time, AM/PM Indicator
Bottom Row: Time of day: hours, minutes, seconds

1. **Setting Normal Time:**
Press and hold **B** for three (3) seconds. Alarm minutes appear flashing. Press or hold **A** to advance alarm minutes. Press **B** to set alarm hours. Press **A** to advance alarm hours. Continue this procedure to set seconds, minutes, hours, month, date and day.

When time, alarm and calendar are set, press **C** to exit.
2. **Arming / Disarming daily alarm and hourly chime:** When

NORMAL TIME is set:

Press A	Alarm	Chime
1	On	Off
2	On	On
3	Off	On

CHRONOGRAPH OPERATION

From NORMAL TIME, press **C** to enter chronograph mode. All zeros should appear on the display. However, if all zeros do not appear, to zeroize:
Running time: Press **A** to Stop. Then Press **B** to zeroize.
Frozen time: Press **B** to zeroize

1. **START:** Press **A** to start. Time starts running on the bottom row of the display.
2. **LAP / SPLIT:** Press **B** to take time readings. Display shows:
Top Row: Lap counter and interval lap time from last reading.
Middle Row: Split time from start of event
Bottom Row: Cumulative running time
Your Robic stopwatch will take as many time readings as you require.
3. **STOP:** At the end of the event, Press **A** to stop timing.
4. **MEMORY RECALL:** To recall the first nine (9) lap and split time readings, while the chrono is stopped, continue to press **D**. The first nine (9) lap and split readings will appear in ascending order (i.e. 1,2,3, . . . 9). If more than nine (9) readings are made, Robic will recall the first eight, as well as the final time reading.

5. **RESET / ZEROIZE:** To reset display to all zeros after completing all memory recalls, press **B**.
6. **RETURN TO NORMAL TIME:** Press **C** at any time during the chronograph operation to return to NORMAL TIME display. Press **C** again, to return to the chronograph mode.

DUAL TIME OPERATION:

From NORMAL TIME, press **C** once. Display shows:
Top Row: Dual time indicator ("DUAL")
Middle Row: Dual time, hours, minutes, AM/ PM Indicator
Bottom Row: Normal time
To set DUAL TIME: Press and hold **B** for three (3) seconds. DUAL TIME minutes appear flashing. Press or hold **A** to advance DUAL TIME minutes.
Press **B** again, hours appear flashing. Press or hold **A** to advance hours. After DUAL TIME is set, press **C** to lock in DUAL TIME.
Press **D** twice, to return to NORMAL TIME.

PACER OPERATION

From NORMAL TIME, Press **C** twice. Display shows:

Top Row: Pacer Indicator ("PACE")
Middle Row: Pacer rate (in beats per minute)
Bottom Row: Normal time

TO SET PACER: Press and hold **B** for three (3) seconds. PACER rate (middle row) appears flashing. Then, press or hold **A** to advance PACER rate. Press **C** to lock in PACER rate.

PACER rate range is from 30 to 160 beats per minute, in increments of five (5) beats per minute.

TO OPERATE PACER: Press **A** to start PACER. An audible beep will sound at the rate entered in the PACER.

TO STOP PACER: Press **A** again while in PACER mode.

Press **D** once to return to NORMAL TIME.
IMPORTANT: The PACER function of your Robic SC-700 requires a high energy drain on the battery of your stopwatch.

OPERATE PACER ONLY WHEN NECESSARY TO MAXIMIZE YOUR BATTERY LIFE.

**CARE AND SERVICE
CARING FOR YOUR TIMEPIECE**

Proper care of your ROBIC will provide many hours of enjoyment. We recommend that:

1. The battery be replaced at once when it becomes depleted. Please ask your local retailer to replace the battery for you using a SANYO type CR2025.
2. The lens be replaced immediately if it becomes damaged, as contamination from dust, moisture, and other foreign substances will damage the module.

3. If the timepiece is not marked "water-resistant," avoid immersing or exposing it to water, steam, or other forms of moisture.

WHEN YOU REQUIRE SERVICE

If your ROBIC timepiece ever requires factory servicing, you can send it directly to:

MBI Corp.
P. O. Box 902
Seymour, CT 06483

We strongly recommend that when sending it through the mail, you send the product insured, return receipt requested, so that if a problem in shipping arises, you can trace it through the originating post office. You will be billed for all services performed deemed out of warranty; and since we reserve the right to substitute with a replacement product of equal or greater value, NEVER include a personal item, such as a watchband, with the repair request.

LIMITED WARRANTY

OUR BASIC POLICY

Marshall-Browning International Corporation (MBI Corp.) warrants to the original owner, this ROBIC quartz digital liquid display timepiece (excluding battery, lens, band, or strap) for the period of one year from the original purchase date. This limited warranty is given by MBI Corp. and not by the dealer from whom the timepiece was purchased.

THE WARRANTY PROCESS

WHAT IS COVERED BY THE WARRANTY

If the timepiece develops a manufacturing defect within the one-year limited warranty period, it will be either repaired or replaced (at MBI Corp.'s option) with a timepiece of equal value, providing the original owner submits the following:

1. Proof of purchase, i.e. a validated store receipt showing date of purchase.
2. A check or money order (no cash, please) in the amount of \$4.50 to cover the cost of shipping and handling.

WHAT IS NOT COVERED BY THE WARRANTY

A. MBI Corp. will not repair defects or damages caused by or showing evidence of:

1. Improper or unauthorized service.
2. Misuse, tampering, abuse, or mistreatment of the timepiece.
3. Damage to the case or visible cracking of the lens.
4. Moisture damage, if the product is a non-water-resistant timepiece.

B. If we find that the battery is the cause of the defect, MBI Corp. reserves the right to charge you (\$3.50) for a new replacement.

MBI Corp. is not liable for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

YOUR RIGHTS UNDER IMPLIED WARRANTIES AND STATE LAW.

MBI Corp. limits the duration of any warranty implied by state law, including the implied warranty of merchantability, to one year from the date of original purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.