




Referee Timer Watch Instruction Manual

*Important: To activate the watch when first use, press S1 and S3 at same to unlock the blank screen.

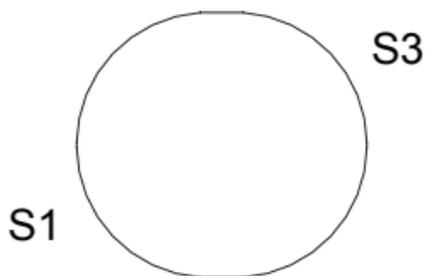

OVERVIEW

Congratulations on your new referee watch! This watch is a user-friendly tool to keep track of your time in multiple ways in various situations. To develop basic understandings and get the most out of your purchase, be sure to carefully read this manual and keep it on hand for future reference.

Features and Key assignment:

S1=MODE / ADJUST

S2=EL (Hold 2sec)

S3=START/STOP

S4=RESET




Features:

- Unique referee timer for various tournament or game.
- Auto calendar with year up to 2099
- Two individual alarm
- With 50 Lap or Split memory.
- Chronograph data recall (fastest, slowest, average, individual lap/split time)
- Unique fastest lap alarm for coach.
- Soft EL backlight

Operation Mode:

Press S1 to scroll below mode in sequence

Time > Referee Timer > Alarm > Chronograph > Time > etc...

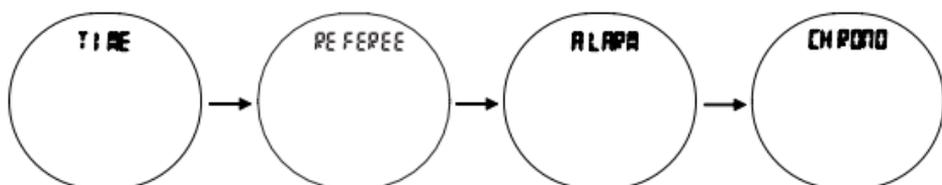

EL Backlight

- Press and hold "S2" 2sec. to activate EL backlight at anytime

Time Mode

- Display Hour, Minute, Seconds, Day of Week
- Press "S3" to toggle 12/24 hour format
- Press and hold "S4" 1sec. to toggle on/off key tone.
- Press and hold "S1" to enter setting mode for time.



Time Setting:

- Press "S1" to scroll , Year > Month > Date > 12/24 format > Hour > Minute > Second
- Press "S3" or "S4" to adjust the digit(flashing)
- Press "S1" to confirm and return to Time mode

Referee Timer Mode

- The lower line on display is tournament count down timer (default 45 minutes, you can adjust the match time in setting mode)

- Press “S2” to start or pause the match timer.
- Press and hold “S4” to Reset to default match time.

- The upper line on display is stoppage time.

- Press “S3” to start (upper line is flashing) or stop stoppage timer (not flashing).

- Press and hold “S3” to reset stoppage timer.

- Stoppage Timer will give beep 30seconds before it end.

- When the match timer plus stoppage timer matches, it will give different beep tone for 10 seconds.

- After crossing 00, the match timer will continue counting up, when exceeding 9’59.99”, return to 00 and start again.



How to set match time

- Press and hold “S4” master reset all timer, then
- Press and hold “S4” again to enter setting mode.
- You can see the first digit flashing, Press “S3” or “S4” advance the digit, press “S2” to confirm.

Alarm Mode

- There are two alarm, press “S3” to toggle alarm 1/2
- Press “S4” to switch on/off the alarm. When alarm is turn on , will shown ♣

How to set alarm

- Press and hold “S1” enter adjust mode



- You can see hour digit flashing, press “S3” or “S4” to adjust the value. Press “S1” to confirm and set minute digit.



Chronograph Mode

- Press “S2” to select Lap time or Split time mode.



- Press “S3” Start counting, press “S2” to record Lap or Split time.
- Press “S3” again to pause or stop counting. Press “S2” to reset to zero.
- Everytime, when you hit the fastest record, a special tone will come out.

Chronograph Data record

- To view the data, the timer need to Stop or Pause.
- Press “S4” to scroll fastest, slowest, average and individual Lap/Split time record and you can see **Recall** icon on display.



Fastest lap and time



Slowest lap and time



Individual record

Tips: Data recall will keep only the latest session even the timer reset. When new session start, previous data will be clear!

Battery Replacement & Water Resistance

WE STRONGLY RECOMMEND TAKING YOUR WATCH TO A LOCAL JEWELER TO HAVE THE BATTERY REPLACED TO AVOID THE POSSIBILITY OF PERMANENTLY DAMAGING THE WATCH OR RESULT TO NOT WATER RESISTS!!

WARNING!

Keep batteries away from children. If swallowed, contact a doctor or emergency personnel immediately. Batteries contain chemical substances. It should be disposed of properly according to local regulations.

Battery Type:

CR2032 x 1piece

Battery Life: The battery is estimated to last 1 year, depending on use of certain features.

Water Resistance: The watch is water resistant under normal use up to 30 Meter (3ATM) means resists to rain drops, water splash or showing only, as long as lens, push buttons, case remain intact.

CARE & MAINTENANCE

****IMPORTANT:** Water damage will occur if the watch buttons are pressed while under water and it will void the warranty.

Avoid extreme force, shock, dust, temperature, or humidity. Such conditions may cause malfunctioning, a shorter electronic life span, damaged batteries, or distorted parts.

The watch can be wiped clean with a lightly moistened cloth. Apply mild soap to the area if there are stubborn stains or marks.

Do not use abrasive or corrosive materials to clean the watch, such as sun tan oil. Abrasive cleaning agents may scratch the parts and corrode the electronic circuit.

Never attempt to disassemble or service your watch.

Store your watch in a dry place when not in use.

