

OSLO® SILVER 30 OPERATING INSTRUCTIONS

THANK YOU for buying the Oslo Silver 30 – Thirty Lap Memory Stopwatch. Your purchase brings you a reliable, World-Class Timer which measures performance for a wide array of sports and other activities.

Your stopwatch was developed to provide a professional quality 30 memory stopwatch with Lap, Split or Dual Split timing options, automatic Lap Counter and convenient EL backlight for nighttime or low light use. In order to ensure that you receive the maximum enjoyment from your Count Up and Countdown Timer, BEFORE USING, PLEASE TAKE A MOMENT TO REVIEW THIS OPERATION GUIDE TO FULLY UNDERSTAND HOW YOUR TIMER WORKS.

FEATURES


- 30 Dual Split Memory Recall
- Lap, Split or Dual Split timing options
- 1/100 second Precision to 10 hours
- Automatic Lap Counter to 99
- EL Backlight for Nighttime or Low Light use
- Time of Day, Alarm & Calendar
- Water Resistant
- Extra Large Display
- Lithium battery CR-2032 included
- One year factory warranty

- A: LAP/RESET
 B: RECALL
 C: MODE
 D: START/STOP
 E: EL LIGHT



DISPLAY SYMBOLS

Normal Time Mode

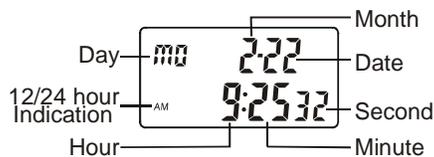

Lap Mode



Split Mode




Alarm Mode



TIME / CALENDAR SETTING

1. Press button **C** to go to Normal Time Mode.
2. Press button **B** for 2 seconds, second digit flashing.
3. Press button **D** to reset the second to 00 when the second is less than 30, add 1 minute when the second is more than or equal to 30.
4. Press button **A** to change the setting items: minute-hour-12/24 hour-month-date-year.
5. Press button **D** to increase the setting value.
6. Press button **B** to exit.

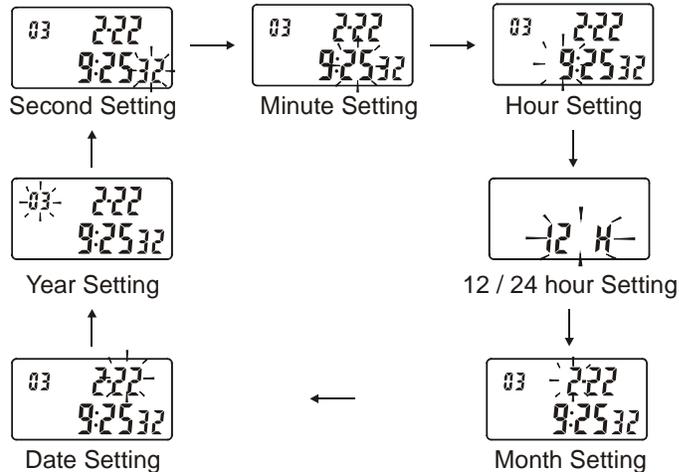

ALARM SETTING MODE

1. From the normal time display, press button **C** 3 times to enter Alarm mode.
 2. Hold button **B** for 2 seconds, hour digit flashes.
 3. Press button **D** to increase the setting value.
 4. Press button **A** to step the setting items.
 5. Press button **D** to increase the value.
 6. Press button **B** to exit.
 7. Press button **D** to turn the alarm on or off.
 8. Press button **C** to turn to the Normal Time Mode.
- Note:** When the alarm is sounding, it lasts for 1 minute. Press any button to stop it.




STOPWATCH MODE


Press button **C** to go to Lap Mode.

Simple Measurement: **D-D-A**

Accumulated elapsed time Measurement: **D-D-D-D-A**

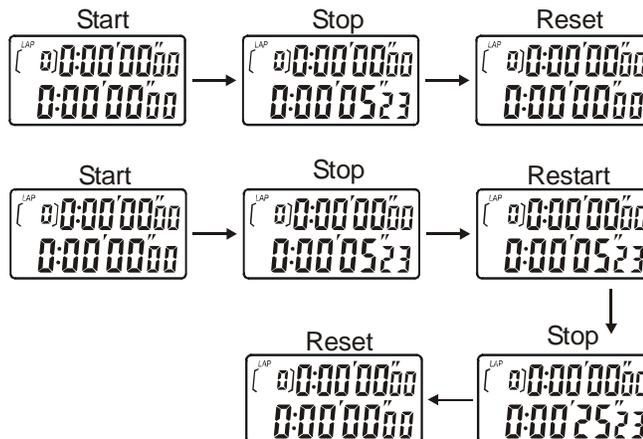


Lap Measurement (Total 30-lap memory measurements and 99-lap measurements).
 For Example: 5 Laps measurement: Button **D-A-A-A-D**

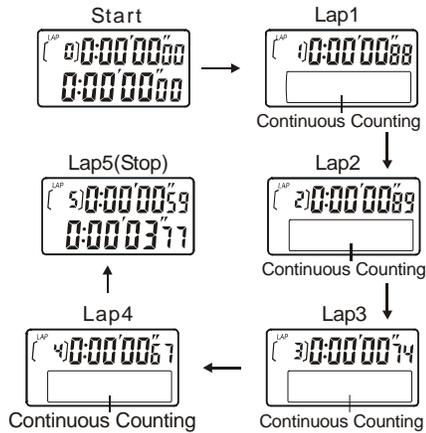


Recall Memory

1. Press button **B** and then press button **A** to view different lap records.
 The display will run through in turn: Lap 1> Lap 2> Lap 3> Lap 4> Lap 5> Lap 1
2. Press button **D** the display is reverse from above.

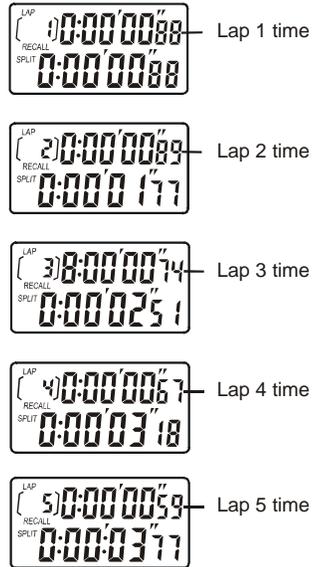

3. Press button **B** to go back to the Lap Mode.
4. Press button **A** to reset the value then start a new game.
5. To delete the records, press **D-D-A**.

Split Measurement Press button **C** to go to Split mode.
 For Example: 5 splits measurement: Button **D-A-A-A-D**

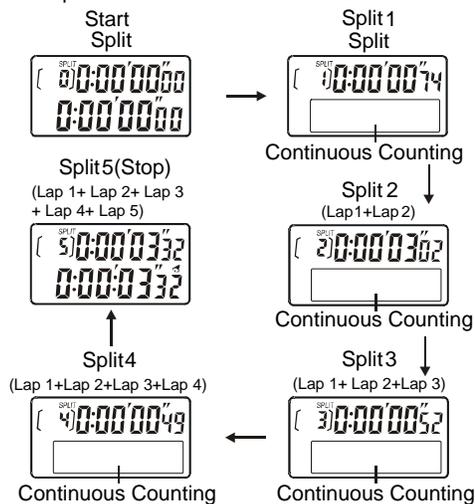

Recall Memory

1. Press button **B** and then press button **A** to view different splits records.
The display will run through in turn: Split 1> Split 2> Split 3> Split 4> Split 5> Split 1



Split 1 time
(Lap 1)



Split 2 time
(Lap 1+ Lap 2)



Split 3 time
(Lap 1+ Lap 2 + Lap 3)



Split 4 time
(Lap 1+ Lap 2 + Lap 3 + Lap 4)



Split 5 time
(Lap 1+ Lap 2 + Lap 3 + Lap 4 + Lap 5)

2. Press button **B** then press button **D** the display is reversed.
3. Press button **B** to turn to the Split Mode.
4. Press button **A** to reset the value then start a new game.
5. To delete the records, press **D-D-A**.

BATTERY REPLACEMENT

When the display becomes dim, replace the battery at once. Screw out the case back and put in a new CR2032 battery. Pay attention to the correct polarity when changing the battery.



LIMITED WARRANTY OUR BASIC POLICY

Marshall –Browning International Corporation (MBI Corp.) warrants to the original owner, this timepiece (excluding battery, lanyard, clip, band or strap) for the period of one year from the original purchase date. This limited warranty is given by MBI Corp. and not by the dealer from whom the timepiece was purchased.

THE WARRANTY PROCESS – WHAT IS COVERED BY THE WARRANTY

If the timepiece develops a manufacturing defect within the one year limited warranty period, it will be either repaired or replaced (at MBI Corp.'s option) with a timepiece of equal value, providing the original owner submits the following:

1. Proof of purchase, i.e. a validated store receipt showing date of purchase.
2. A check or money order (no cash, please) in the amount of \$7.50 to cover the cost of shipping and handling

WHAT IS NOT COVERED BY THE WARRANTY

- A. MBI Corp. will not repair defects of damages caused by or showing evidence of:
 1. Improper or unauthorized service.
 2. Misuse, tampering, abuse or mistreatment of the timepiece.
 3. Damage to the case or viable cracking of the lens.
 4. Moisture damage, if the product is a non-water-resistant timepiece.
- B. If we find that the battery is the cause of the defect, MBI Corp. reserves the right to charge you (\$7.50) for a new replacement.

MBI Corp. is not liable for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

YOUR RIGHTS UNDER IMPLIED WARRANTIES AND STATE LAW.

MBI Corp. limits the duration of any warrant implied by state law, including the implied warrant of merchantability, to one year from the date of original purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

CARING FOR YOUR OSLO SIVER 30

Proper care of your timepiece will provide many years of enjoyment. We recommend that:

1. The battery be replaced at once when it becomes depleted. Please ask your local retailer to replace the battery for you using **CR2032 or equivalent**.
2. The lens be replaced immediately if it becomes damaged, as contamination from dust, moisture, and other foreign substances will damage the module.
3. If the timepiece is not marked "water-resistant," avoid immersing or exposing it to water, steam, or other forms of moisture.

WHEN YOU REQUIRE SERVICE

If your timepiece ever requires factory servicing, you can send it directly to:

MBI CORP, 115 HURLEY RD, BLDG 1-A, OXFORD, CT 06478

We strongly recommend that when sending it through the mail, you send the product insured, return receipt requested, so that if a problem in shipping arises, you can trace it through the originating post office. You will be billed for all services deemed out of warranty; and since we reserve the right to substitute with a replacement product of equal or greater value, **NEVER** include a personal item, such as a watchband, with the repair request.

Robic...Timers & pedometers for champions at every level! Please call (203) 264-2702 for a free catalog.